 


seville classics®

GloGlobe™ Wireless Rechargeable Floatable Light

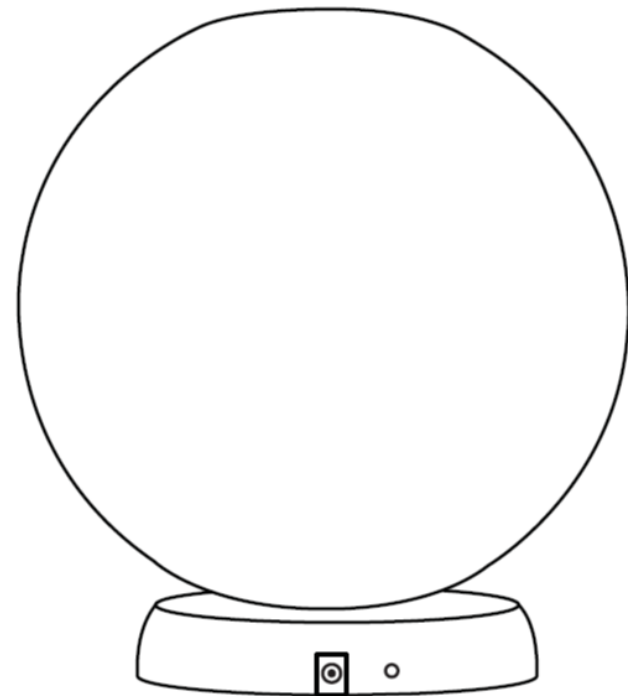

Model: EHF10231B, WEB609

Thank you for choosing Seville Classics! We hope that you enjoy your new rechargeable floatable light. Please read through this user guide for parts list, assembly instructions, frequently asked questions and contact information.

Customer Service Information

Telephone: (800) 323-5565

Fax: (310) 533-3899


Hours: 8:30 AM – 4:30 PM (PST)

Email: Support@SevilleClassics.com


Homepage: www.SevilleClassics.com

Parts List


A. GloGlobe™ (1)

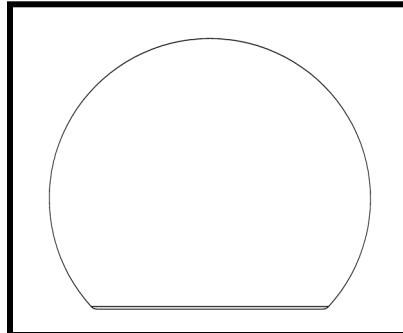


B. Charging base (1)

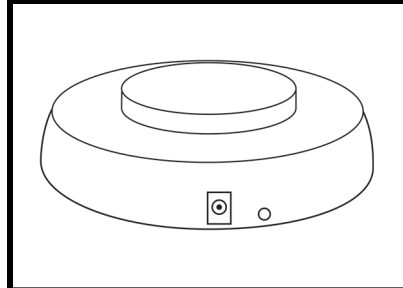

C. Adapter (1)

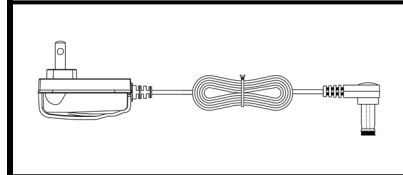

D. Remote (1)

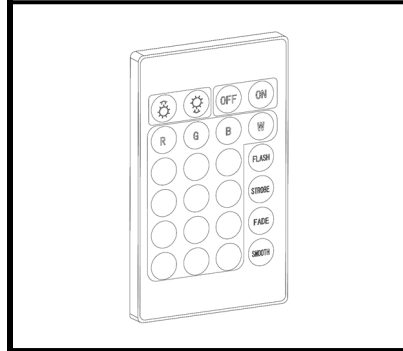

Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced Radio/TV technician for help.

Please make sure you have all the parts on this list.

If you're missing parts, contact us for replacements at (800) 323-5565 or send an email to Support@SevilleClassics.com

Features

- 8-12 hours of operation per full charge
- 16 LED color options (with dimmer)
- IPX7 Waterproof Rating
- 4 modes (flash/strobe/fade/smooth)
- 24-key remote control
- Stainless-steel hanger
- Wireless rechargeable lithium-ion battery

Specifications

- 12 RGB LEDs
- Rechargeable lithium-ion battery 3.7V 2000mAh
- Charging time: 7 to 9 hours
- Operation time: 8 to 12 hours
- IR remote control range: 13 feet (4 meters)

Warnings


- This is not a toy, keep out of the reach of children.
- Keep this product away from chemicals, or high heat.

Regarding the adapter:

- Only use the adapter to charge GloGlobe™.
- Do not use adapter outdoors. Do not expose to rain, humidity, liquids or heat.
- Keep the adapter and charging base out of the reach of children.
- Disconnect the adapter from power when not in use.
- Never attempt to open the adapter or the charging base (Parts B and C).

- Keep the remote control away from water, liquids and heat.
- Never attempt to open the GloGlobe™ (Part A).
- Do not put the GloGlobe™ on the water if damage/crack is found.
- Never throw the GloGlobe™ into the pool. Place onto the water gently.
- Take the GloGlobe™ out of the pool when not in use.
- Never jump, sit, or stand on the product.

Use Instructions

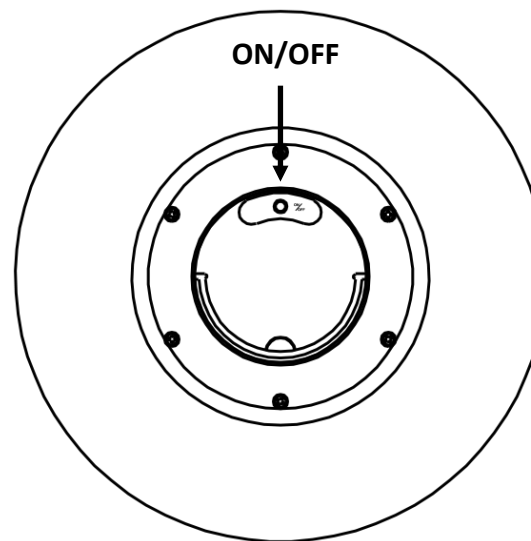


Press and hold the **ON/OFF** button (3 seconds) on the bottom of **GloGlobe™** to turn on or off.

GloGlobe™ will default to the last setting used when turned on.

Press **ON/OFF** button to cycle through the 4 modes (flash/strobe/fade/smooth).

Use stainless-steel hanger on bottom of **GloGlobe™** to hang.

Charging Instructions

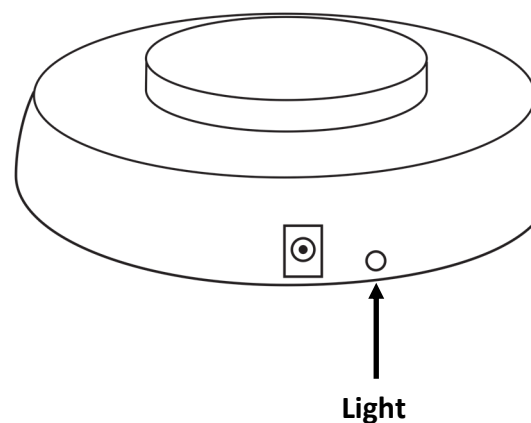

Set **BASE (A)** on a dry and level surface.

Connect **ADAPTER (A)** to **BASE (A)**, and then to an outlet.

Light on **BASE (A)** will turn green when connected correctly.

Place **GloGlobe™ (A)** on **BASE (B)**.

Light on **BASE (A)** will turn red when charging correctly.

Light on **BASE (A)** will turn green when charging complete.

Disconnect **ADAPTER (A)** and remove **GloGlobe™ (A)**.

Remote Control Instructions



IMPORTANT! Before using the remote control, first remove the plastic sheet from the battery cover.



Turn GloGlobe™ On/Off



Brighten/Increase Speed



Dim/Reduce Speed



Choose from 16 colors including white



Colors flash red, green, and blue



7 colors flash



Colors fade from one to the next through all 16 colors



Colors slowly transition through red, green, and blue

Remote Control Troubleshooting



If the remote control doesn't work, replace the battery (CR2025).

Press the tab on the side of battery cover and slide it off.

IMPORTANT! Note polarity (+/-) on the cover when installing battery.

Remove battery if remote will not be used for an extended time period.

KEEP BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.