

#### STEP 4. Insert Drawers

Slide the **DRAWERS (D)** into the channels and clip the **SHELF (C)** onto the crossbars.

**TIP:** Once fully assembled, tighten all screws.

Congratulations!

Enjoy your new organizer cart!

## FAQs

### Q. How big is it?

A. Unit measures 15.5" W x 15.4" D x 38.2" H

### Q. Can I use it without the casters?

A. No, the cart is not designed to be used without the casters.

### Q. How much weight can it hold?

A. Weight capacity per drawer: 3.3 lbs. (1.5 kgs)

Weight capacity on top shelf: 16.5 lbs. (7.5 kgs)

Total weight capacity: 49.5 lbs. (22.5 kgs)

## Customer Service Information

**Telephone:** (800) 323-5565

**Fax:** (310) 533-3899


**Hours:** 8:30 AM – 4:30 PM (PST)

**Email:** [Support@SevilleClassics.com](mailto:Support@SevilleClassics.com)

**Homepage:** [www.SevilleClassics.com](http://www.SevilleClassics.com)

# seville classics®



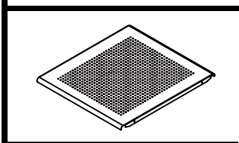
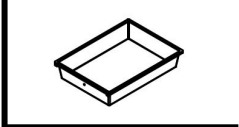


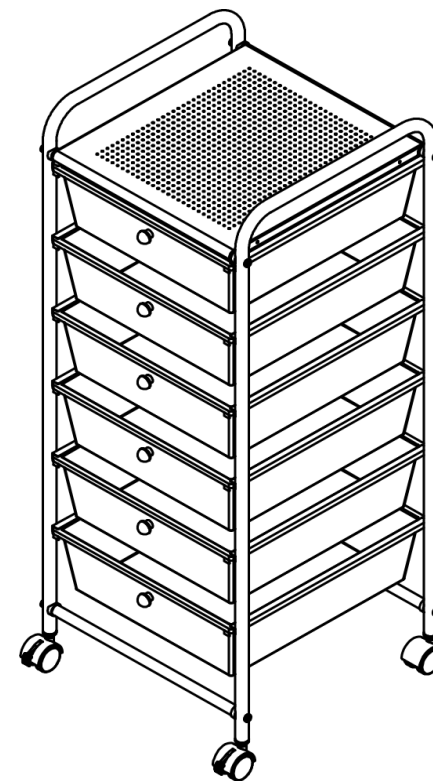





## Large 6-Drawer Storage Bin Organizer Cart



Model #: WEB490, SHE16206B

Thank you for choosing Seville Classics! We hope that you enjoy your organizer cart. Please read through this user guide for parts list, assembly instructions, frequently asked questions and contact info.


# Parts List

A. Side frame (2)	
B. Crossbar (4)	
C. Shelf (1)	
D. Drawer (6)	
E. Sleeve (4)	
F. Caster (2)	
G. Locking caster (2)	
H. Bolt (8)	
I. Washer (8)	
J. Screw (6)	
K. Drawer Pull Knob (6)	
L. Allen Wrench	

**Please make sure you have all the parts on this list.**

If you're missing parts, contact us for replacements at (800) 323-5565 or send an email to [Support@SevilleClassics.com](mailto:Support@SevilleClassics.com)

# Assembly Instructions

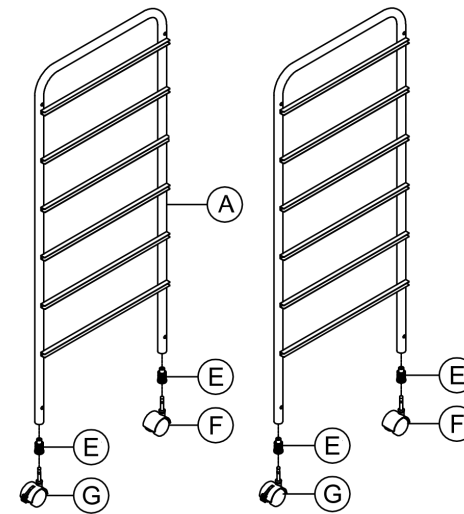

## STEP 1. Attach Casters


**TIP:** Make sure channels on each **SIDE FRAME (A)** face each other.

Push the **SLEEVES (E)** into the bottom poles of **SIDE FRAMES (A)** until flush with bottom.

Push **CASTERS (F)** and **LOCKING CASTERS (G)** into the **SLEEVES (E)** until click is felt.

## STEP 2. Attach Crossbars

Fit a **WASHER (I)** between **SIDE**

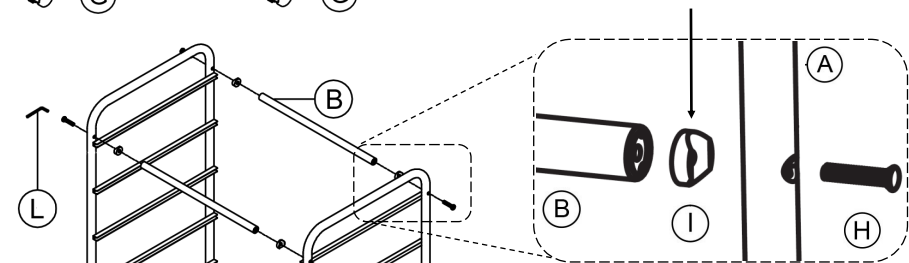

## **FRAME (A)** and **CROSSBAR (B).**

Flat side of washer MUST sit in end crossbar. Curved side of washer MUST fit against side frame.

Screw **BOLT (H)** through outer bolt holes on a **SIDE FRAME (A)** and into **CROSSBAR (B)**.

**TIP:** Do not tighten until drawers are fully inserted.

## STEP 3. Assemble Drawers

Attach **DRAWER PULL KNOBS (K)** to all **DRAWERS (D)** with **SCREWS (J)** and screwdriver.

